



LG Optimus 3D Headphone Jack Replacement

This guide will show you how to replace the headphone jack in your LG Optimus 3D smartphone.

Written By: Dale Pearson





TOOLS:

- [Heat Gun](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Cover Removal



- Pry the back cover off of the phone with your fingernail. There is a notch located at the bottom of the phone for improved leverage.

Step 2 — Battery Removal



- The battery is the large black rectangle towards the bottom half of the phone.
- There is a semi-circular notch at the bottom edge of the battery. Press against and up on the battery to pop it out.

Step 3 — Screw Removal



- Remove 9 screws from the phone. The locations of these screws are circled in the picture.
- 5.5mm length PH00 screws
- 4mm length PH00 screws

Step 4 — Bottom Cover Removal




- Gently pull down on the bottom cover to remove it.

Step 5 — Mid-Cover Bezel Removal




- Using a plastic opening tool, gently pry around the perimeter of the device.
- ⚠ The ribbons behind the buttons and ports are very delicate. Make sure you do not run your plastic opening tool too deep into the bezel, as you could damage them.
- The button covers rest under the Mid-Cover Bezel. Remove them and set aside.

Step 6 — Ribbon Cable Disconnection

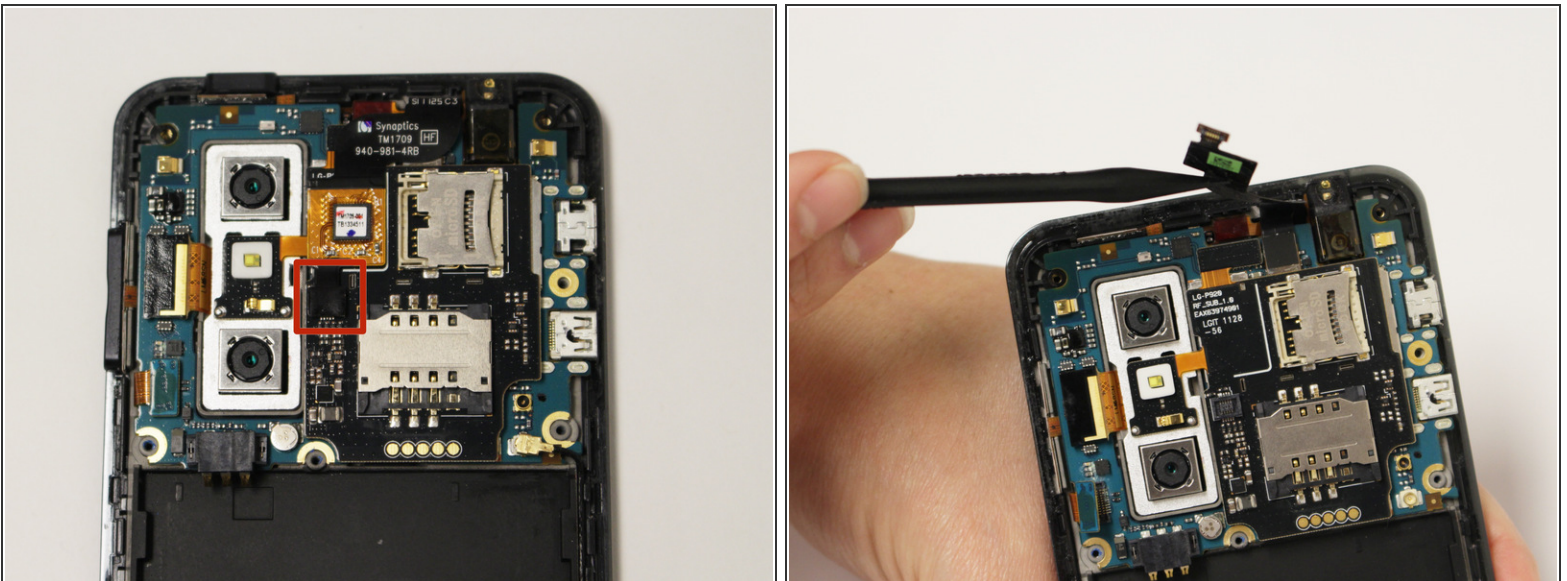


- Using a spudger or plastic opening tool, gently disconnect the ribbon cable attached to the black SIM card board.


Step 7 — Adhesive Loosening

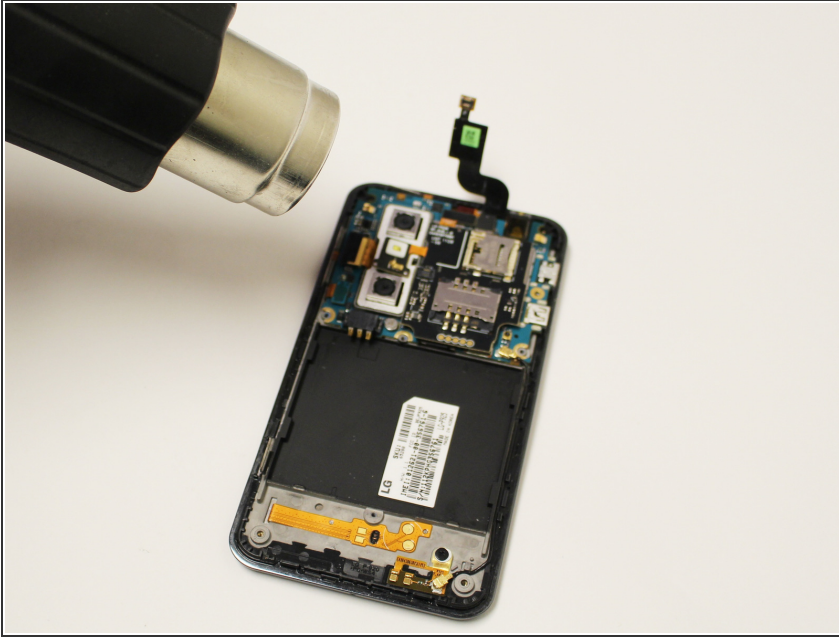

- Use a hair-dryer on high, or a heat-gun on low to heat the device and loosen the adhesive which holds down the SD/SIM Card Board.
- Evenly heat the device in short intervals for about one minute.


 Do not heat the device for more than 30 seconds at a time to prevent over-heating.

Step 8 — SD/SIM Card Board Removal

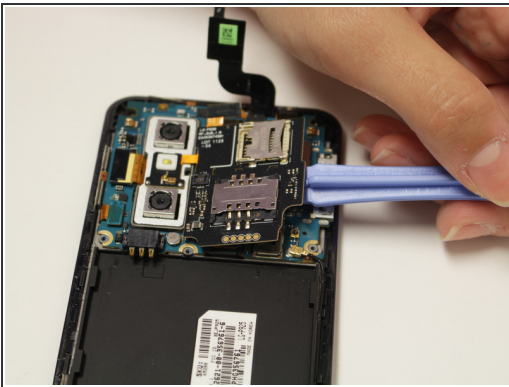


- Gently pry the board up to release it from the now soft adhesive. Make sure you pry up the little tab connected to the camera unit as well.
- If the board is too difficult to separate than more heating may be required.

Step 9 — Disconnect Ribbon Cables

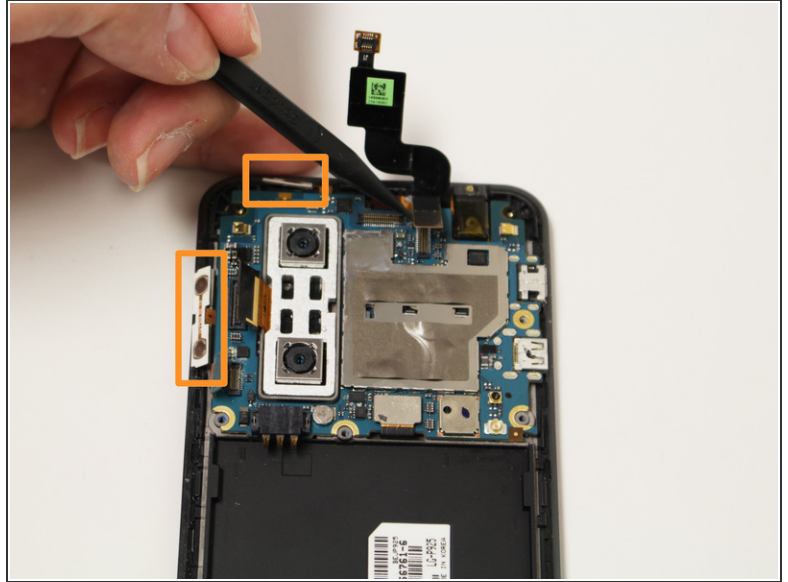


- Using a spudger or plastic opening tool, gently lift the ribbon cables connected to the motherboard.
- The button tabs, highlighted in orange, are held in with a light adhesive. Gently lift them out of the body of the phone with a spudger.

Step 10 — Disconnect Antenna

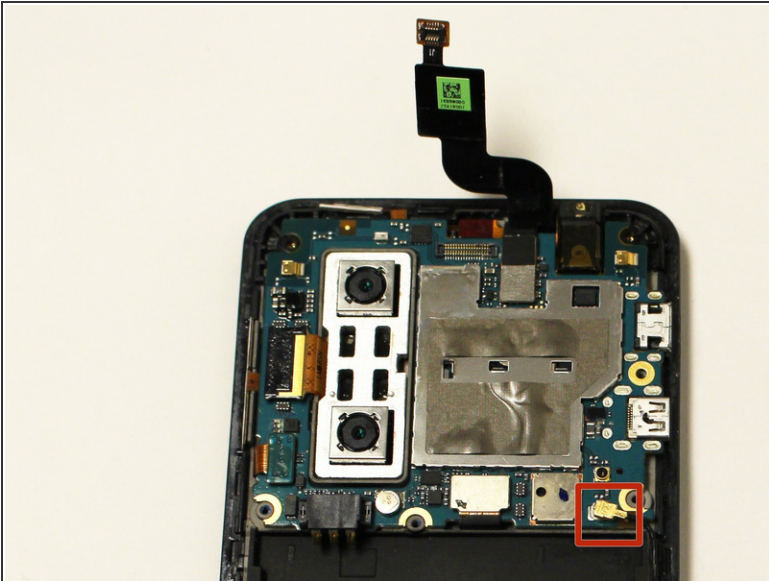

- Remove the antenna cable by disconnecting both ends.
- One end connects to the motherboard and the other connects near bottom of the phone.

Step 11 — Remove Motherboard

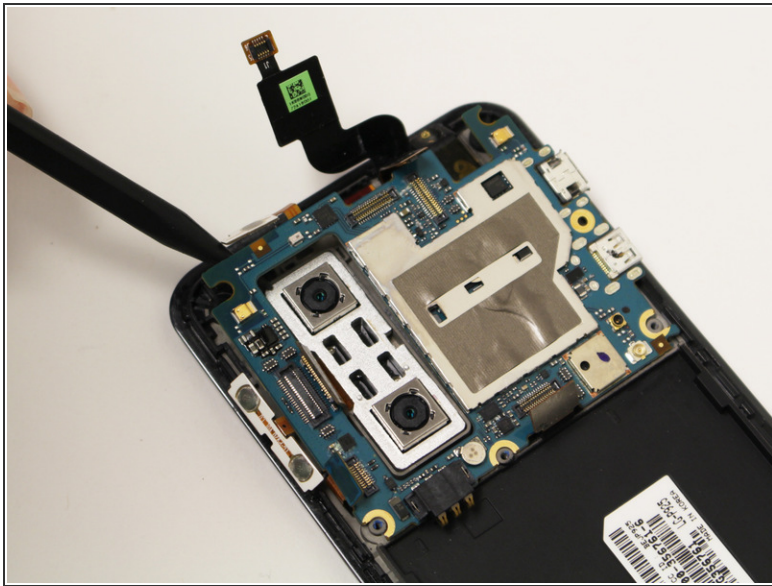

- Using a spudger gently lift the motherboard assembly out of the case.
- ⓘ Make sure the motherboard does not get snagged on the camera's ribbon cable.

Step 12 — Ribbon Cable Disconnection



- Using the plastic opening tool disconnect the ribbon cable connected to the headphone jack assembly.

Step 13 — Headphone Jack Removal



- Separate the Headphone Jack from the body of the phone. It should pop off relatively easily.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 07:32:23 PM.